


the Tea Maker™



Breville®



Components

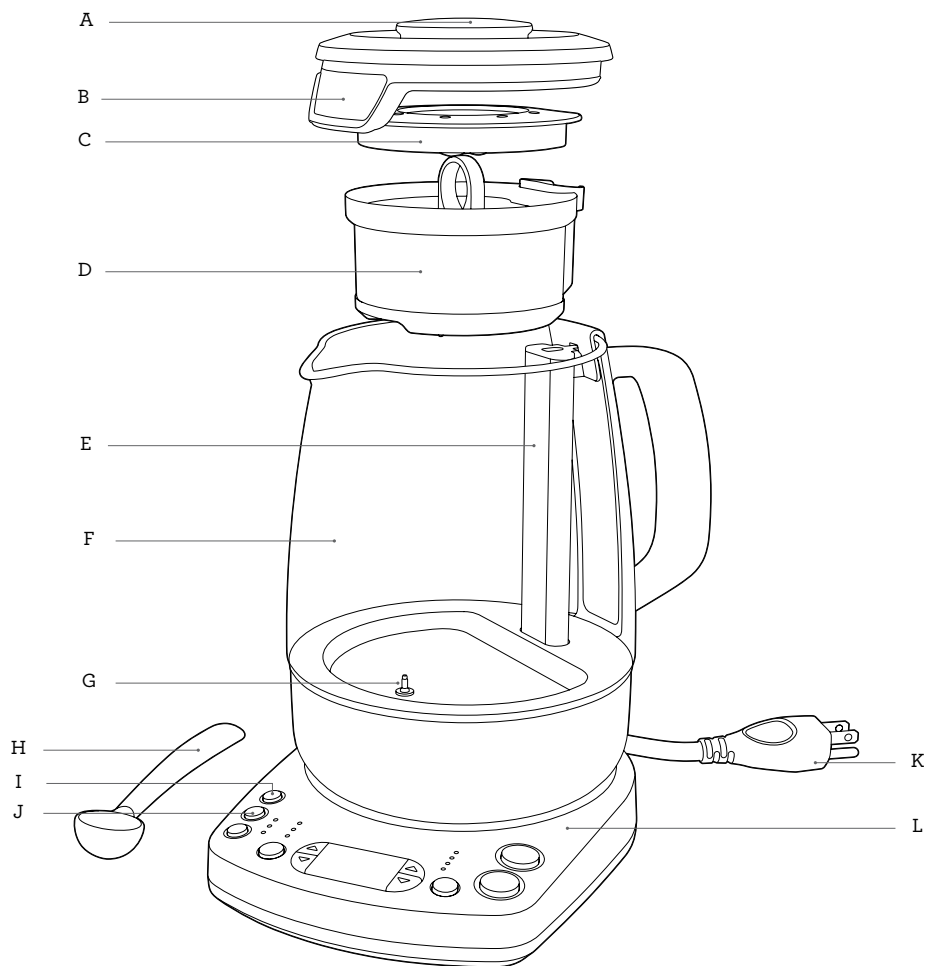

A. Jug lid

B. Stainless steel scale filter

C. Tea basket lid

D. Stainless steel tea basket

E. Jug post magnetically attaches the tea basket.

F. Glass jug 51oz water max, 41oz tea max.

G. Immersed temperature sensor


H. Tea scoop

I. **AUTO START** button set the tea maker to automatically begin brewing at a pre-selected time.

J. **KEEP WARM** button keeps the brewed tea or heated water warm for up to 60 minutes.

K. Cord Storage concealed on the underside of the power base.

L. Power base

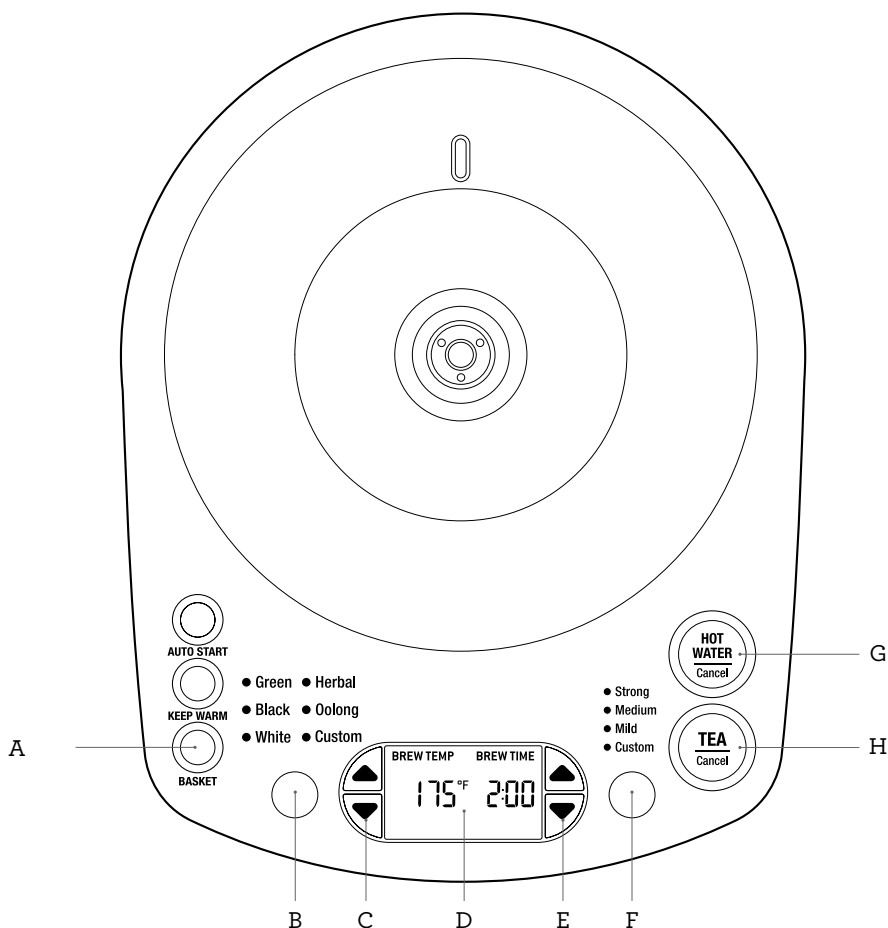

- A. BASKET button continuously auto lifts & lowers the tea basket. The movement allows water to circulate freely around the tea leaves for maximum infusion.
- B. TEA TYPE button preset brew temperatures recommended for green, black, white, herbal & oolong tea.
- C. Variable temperature control overrides the preset brew temperatures.
- D. Backlit LCD
- E. Variable time control overrides the preset brew times.
- F. TEA STRENGTH button preset brew times recommended for strong, medium and mild brews.
- G. HOT WATER|Cancel button for use as a variable temperature kettle.
- H. TEA|Cancel button activates the tea brewing cycle.

Rating Information
120 V~ 60 Hz 1500 W



Operations

USE AS A TEA MAKER FOR BREWING TEA


1. Remove the Glass Jug from the Power Base and remove Jug Lid. When brewing tea, fill with desired amount of water. Ensure you do not fill past the tea maximum mark (1200mL TEA MAX).



WARNING


Filling past the 'MAX' line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the 'MIN' line will result in the tea maker switching off before the water has boiled or reached the selected temperature.

2. Place the Basket on a flat, dry surface. Remove Basket Lid by lifting from the sides.

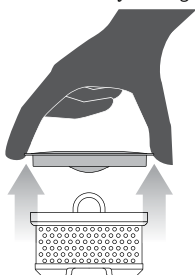

3. Use the provided Tea Scoop to fill the Basket with tea leaves. As a general guide, use 1 scoop of tea leaves per cup / 8oz / 250ml of water, however this will depend on the instructions on tea packaging and your personal preference (See Page 13, Water to Tea Scoop Ratio).
4. Replace the Basket Lid on top of the Basket. Ensure lid is securely in place.

5. Slide the assembled Basket on to the magnetic post located within the Glass Jug. The assembled Basket will attach itself to the top of the magnetic post. Replace Jug Lid.

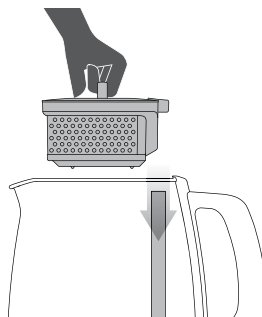

Selecting the Tea Type

The tea type determines brew temperature.

The Tea Maker has 5 preset tea types recommended for optimal brewing of Green, Black, White, Herbal or Oolong Tea. It also features a customizable tea type temperature setting for other tea varieties or to suit your personal taste (see Page 15, Customizing Brew Temperature).

6. To select a preset tea type:
 - a) Press the TEA TYPE button and toggle through until the desired tea - 'Green', 'Black', 'White', 'Herbal' or 'Oolong' illuminates.
 - b) The LCD screen will display the preset brew temperature recommended for optimal brewing of the selected tea type. This is displayed as the left figure on the LCD screen.

TEA TYPE	Green	White	Oolong	Herbal	Black
Preset Brew Temp	175°F	185°F	195°F	205°F	212°F
Preset Brew Time	3:00	3:00	3:00	4:00	2:00

Selecting the Tea Strength

The desired tea strength determines the brew time. The correct brew time depends on the tea type and your personal tea strength preference.

The Tea Maker has 3 preset tea strengths recommended to achieve Strong, Medium or Mild tea brews. It also features a customizable brew time setting to suit your personal taste (see Page 15, Customizing Brew Time).

7. To select a preset tea strength:
 - a) Press the TEA STRENGTH button and toggle through until the desired tea strength - 'Strong', 'Medium' or 'Mild' illuminates.
 - b) The LCD screen will display the preset brew time recommended to achieve the selected brew strength for the tea type selected. This is displayed as the right figure on the LCD screen.
8. Press the TEA|Cancel button to start the tea brewing cycle. The button surround will illuminate and the LCD screen will display 'ON' and the real-time heating progress in increments of 5°F.



NOTE

The 'BREW TIME' can be adjusted during the heating process but 'BREW TEMP' cannot be changed once the heating cycle commences.

To change the brew time press the right ▲ ARROW UP button to increase the time, or the right ▼ ARROW DOWN button to decrease the time. The brewing time can be adjusted in 30 second increments up to a maximum of 10 minutes.

To change the brew temperature, press the TEA|Cancel button to cancel the heating cycle. Re-select the brew temperature (see Page 15).



NOTE

If the Glass Jug is removed from the Power Base during the water heating cycle, the cycle will automatically cancel as a safety precaution. Press the TEA|Cancel button to recommence the cycle.

9. Once the selected brew temperature is reached the assembled Basket will automatically lower into the heated water.
10. Once the Basket reaches the bottom of the Glass Jug, the LCD screen will indicate the brewing progress, automatically counting down in one second increments. This is displayed as the right figure on the LCD screen.



NOTE

If the Glass Jug is removed from the Power Base during the brewing cycle, the LCD screen will continue to count down. The Tea Basket will automatically return to the top of the Glass Jug once the brew time has elapsed and the Glass Jug is returned to the Power Base.

11. At the end of the tea brewing cycle, the Basket will automatically rise to the top of the Glass Jug to prevent over-brewing. The tea alert will sound three times. The LCD screen will automatically display the 'Time Since Brew' function. This function counts up to a maximum of 60 minutes, allowing you to monitor the freshness of your brew. It does not activate the heating elements.

Selecting the 'Keep Warm' Feature

This feature allows the brewed tea or heated water to remain warm for up to 60 minutes. The 'Keep Warm' temperature ranges between 120-175°F depending on the original brew temperature selected. The lower the brew temperature, the lower the 'Keep Warm' temperature.

Original Brew Temp.	Approximate Keep Warm Temp.
120°F - 150°F	120°F
155°F - 175°F	155°F
185°F	165°F
195°F - 212°F	175°F



NOTE

During the 'Keep Warm' cycle, brewed tea will continue to develop flavor. Depending on how long you intend to keep the brewed tea warm, you may consider reducing the initial tea strength / brew time (see Pages 8 and 9).

To activate the 'Keep Warm' feature:

Press the KEEP WARM button before, during or after completion of the tea brewing or water heating cycle. The button surround will illuminate, indicating the 'Keep Warm' feature has been selected.



NOTE

'Keep Warm' will only maintain temperature during the 60 minute 'Time Since Brew' feature at the end of the 'Tea' or 'Hot Water' function.

1. Once the tea brewing or water heating cycle is complete, the LCD screen will automatically display the 'Time Since Brew' count-up. The KEEP WARM button surround will remain illuminated, indicating the 'Keep Warm' cycle is active for up to 60 minutes during 'Time Since Brew' while the Glass Jug remains on the Power Base.
2. During this time, the Glass Jug can be removed from the Power Base, however the 'Keep Warm' feature will automatically switch off. You can re-select the 'Keep Warm' feature by pressing the KEEP WARM button. The 'Keep Warm' cycle will remain active for the duration of the 60 minute 'Time Since Brew' feature.



NOTE

'Keep Warm' feature will not activate and will not function if water temperature is below 120°F.

Selecting the 'Basket Cycle' Feature

This feature continuously auto lifts and lowers the Basket during the tea brewing cycle. This movement loosens the tea leaves within the Basket, allowing the heated water to circulate freely around the tea leaves for maximum infusion.



NOTE

The 'Basket Cycle' can significantly increase the rate of infusion and affect the tea strength. You may consider reducing the initial tea strength / brew time (see Pages 8 and 9) when using the 'Basket Cycle' feature.



NOTE

It is recommended that this feature is used only when making between 1000mL (approx. 4 cups/32oz.) to 1200mL (approx. 5 cups/40oz.).

1. To activate the 'Basket Cycle' feature, press the BASKET button once. The button surround will illuminate and the LCD screen will display BASKET CYCLE.
2. During the brewing cycle, the BASKET button surround will flash while the Basket slowly lifts and lowers within the heated water.
3. The 'Basket Cycle' feature can be canceled anytime during the tea brewing cycle. Press the BASKET button once. The button surround will cease to illuminate and the LCD screen will no longer display BASKET CYCLE. The Basket will return to the bottom of the Glass Jug for the remaining brewing time.

USE AS A VARIABLE

TEMPERATURE KETTLE

The Tea Maker can be used for boiling or heating water to a customizable temperature.



NOTE

If you have used the Glass Jug for making tea we recommend thoroughly cleaning the interior of the Jug and removing the Tea Basket before boiling or heating water.

1. Fill the Glass Jug with the desired amount of water. Do not fill over the water maximum mark (1500mL WATER MAX).

a) **To boil water (212°F):**


Press the left ▲ ARROW UP button to increase the temperature to 212°F. The 'Custom' LED will automatically illuminate.

b) **To heat water to a customized temperature:**

Press the left ▲ ARROW UP button to increase the temperature, or the left ▼ ARROW DOWN button to decrease the temperature. The temperature can be adjusted in 5°F increments from 120 to 205°F, then a maximum of 212°F (or in the Celsius mode, 5°C increments from 50°C to a maximum of 100°C). The 'Custom' LED will automatically illuminate.

- Green ● Herbal
- Black ● Oolong
- White ● Custom

- Strong
- Medium
- Mild
- Custom

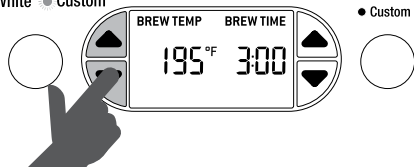

NOTE

Once a customized temperature has been selected and one tea making or water heating cycle has been activated, the customized temperature setting will remain in the memory of the Tea Maker until you change it. To return to default settings, see Page 20.

2. Press the HOT WATER|Cancel button to start the cycle. The button surround will illuminate and the LCD screen will display 'ON' and the real-time heating progress in increments of 5°F.
3. The brew temperature cannot be changed once the heating cycle commences. To change the brew temperature, press the HOT WATER|Cancel button to cancel the heating cycle. Re-select the brew temperature (see Page 8).
4. Once the selected temperature is reached, the tea alert will sound three times. The LCD screen will automatically display the 'Time Since Brew' function. This function counts up to a maximum of 60 minutes, allowing you to monitor when the water heating cycle was complete. It does not activate the heating elements.
5. The Tea Maker has a 'Keep Warm' Feature that allows brewed tea or heated water to remain warm for up to 60 minutes. This feature can be activated before, during or after the water heating cycle (see Page 10, To Activate the 'Keep Warm' Feature).



Tips

TEA TYPES

There are four main types of teas from the tea plant *camellia sinensis*. The picking and processing methods determine the type of tea finally produced.

Black Tea

1. Black tea is the most common type of tea worldwide. It is made by fermenting the harvested leaves for a couple of hours before heating or drying. This oxidation darkens the leaves and increases the amount of caffeine. Of all the teas, black tea has the strongest color and flavor.

White Tea

2. White tea is the rarest and the most exclusive tea. White tea consists of the whitish buds of the tea plant which are steamed then left to dry naturally. This tea is low in caffeine and has a slightly sweet flavor.

Green Tea

3. Green tea makes up approximately ten percent of the world's tea. The leaves are picked, rolled and dried before they can go brown. Green tea has a distinctive aroma and has a slight astringent taste.

Oolong Tea

4. Oolong Tea is semi fermented, which means leaves are processed immediately after picking. They only have a short period of oxidation which turns the leaves from green to red/brown. Its leaves have a floral, fruity quality and hence have a delicate fruity taste. It is recommended not to drink Oolong tea with milk, sugar or lemon.

Herbal infusions or Tisanes

5. Herbal infused teas are not produced from the tea plant, but from flowers, leaves, roots or seeds. Common herbal beverages are chamomile, peppermint, fennel, rose hip, and lemon verbena. Herbal infusions that do not contain tea will generally not become bitter with extended brews. These can often be brewed with boiling water 3 times without jeopardizing the taste.

Blends

6. Tea producers make blends by combining different types of teas, often in order to achieve flavor consistency from one season to the next. Common black tea blends include English Breakfast, Earl Grey, Irish Breakfast, and Russian Caravan.



TIP

Brewed tea leaves make an ideal garden fertilizer and help condition the soil.

TEA STORAGE

- Teas stored inside a vacuum sealed bag can be stored for up to two years, depending on the quality and grade of tea. Once opened, tea should be stored in an airtight container and kept in a dry and dark place.
- Once opened, black teas will last longer than green and oolong teas, but all tea needs to be stored in ideal conditions.
- You can tell when tea is past its best if it has lost its aroma and will create either a bitter or dull tasting cup.

TIPS FOR OPTIMAL TEA BREWING

- Water quality affects taste. For best results, use filtered water.
- Finer tea particles and leaves will infuse more quickly than whole leaves. As a result, finer tea particles often release too much tannin too quickly, creating a harsher taste. Adjust the brewing time until desired strength is achieved.
- Using the tea scoop provided, spoon roughly one scoop of tea per cup / 8oz / 250ml of water.

WATER TO TEA SCOOP RATIO

Glass Jug Marking	Cups / Ounces	Tea Scoops
500mL	Approx. 2 Cups / 16oz	2 Scoops
750mL	Approx. 3 Cups / 24oz	3 Scoops
1000mL	Approx. 4 Cups / 32oz	4 Scoops
1200mL	Approx. 5 Cups / 40oz	5 Scoops

PREPARING THE TEA MAKER FOR USE

In order to remove any dust or protective residues from the manufacturing process, it is recommended to run a boiling cycle then discard the water.

1. Remove and safely discard any packing material, promotional labels and tape from the Tea Maker.
2. Remove the Jug Lid then remove the Tea Basket from the magnetic post within the Glass Jug. Wash the Jug Lid, Tea Basket, Basket Lid and Tea Scoop in warm soapy water with a soft sponge, rinse and dry thoroughly.



WARNING

Never immerse the **BASE OF THE GLASS JUG, POWER BASE, POWER CORD** or **POWER PLUG** in water or allow moisture to come in contact with these parts

3. Place the Power Base on a flat, dry surface.
4. Without the Tea Basket in place, fill the Glass Jug to the water maximum mark (1500mL WATER MAX) and place on the Power Base. Securely fit the Jug Lid onto the Glass Jug.




WARNING


Never fill the glass jug with chilled water. Allow the tea maker to cool before refilling.

Filling past the 'MAX' line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the 'MIN' line will result in the tea maker switching off before the water has boiled or reached the selected temperature

5. Unwind the power cord completely and insert the power plug into a grounded wall outlet.
6. The LCD screen will illuminate with the default brew temperature and brew time display.

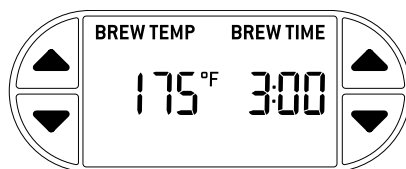

7. Press the left ARROW UP button until the LCD screen displays 212°F. The 'Custom' LED will automatically illuminate.

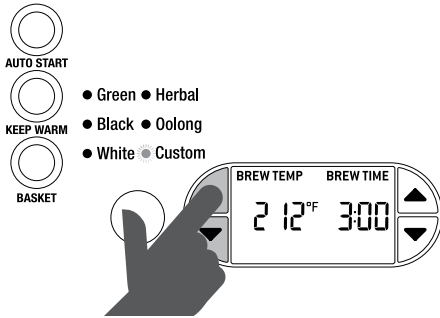

8. Press the HOT WATER|Cancel button to start the cycle. The button surround will illuminate and the LCD screen will display 'ON' and the real-time heating progress in increments of 5°F.
9. Once the water reaches 212°F, the tea alert will sound three times and the HOT WATER|Cancel button surround will cease to illuminate.
10. Discard the water. The Tea Maker is now ready to use.



Features

CUSTOMIZING BREW TEMPERATURE

In addition to the 5 preset brew temperatures (see Page 8, Selecting the Tea Type), the Tea Maker also features a customizable brew temperature setting for other tea varieties or to suit your personal taste.

To customize a brew temperature:

1. Press the left ARROW UP button to increase the temperature, or the left ARROW DOWN button to decrease the temperature. The brewing temperature can be adjusted in 5°F increments from 120°F to 205°F, then a maximum of 212°F (or in the Celsius mode, 5°C increments from 50°C to a maximum of 100°C).
2. The LCD screen will display the customized brew temperature. This is displayed as the left figure on the LCD screen.



NOTE

Pressing the left ARROW UP or the ARROW DOWN button while 'Green', 'Black', 'White', 'Herbal' or 'Oolong' are illuminated, will override the tea type options and illuminate 'Custom'.



NOTE


This product is not calibrated for commercial or scientific use. Temperatures may vary, however are still within range for optimal brewing of each tea variety.

CUSTOMIZING BREW TIME

In addition to the 3 preset brew times (see Page 9, Selecting the Tea Strength), the Tea Maker also features a customizable brew time setting to suit your personal taste.

To customize a brew time:

1. Ensure the brew temperature (tea type) has been selected (see Pages 8 and 9).
2. For brew times less than 10 minutes:
 - a) Press the right ARROW UP button to increase the time, or the right ARROW DOWN button to decrease the time. The brewing time can be adjusted in 30 second increments up to a maximum of 10 minutes.
 - b) For brew times over 10 minutes, use the 'Manual Lift' mode. In this mode, once the correct water temperature is reached, the assembled Basket will automatically lower and commence brewing. However, it will not automatically lift the Basket, allowing you to manually lift it once the desired brew time has elapsed.
3. Press the right ARROW UP button to increase the time up to the maximum 10 minutes.
4. Continue to press the right ARROW UP button. The LCD screen will display 'MANUAL LIFT' and '-:-:-'.
5. Once the Tea Maker is activated and the correct water temperature is reached, the Basket will automatically lower.
6. The LCD screen will automatically commence the 'Brew Time' feature. This feature counts up to a maximum of 60 minutes, allowing you to monitor how long the Basket has been submerged.
7. Once the desired brew time has elapsed, press and hold the BASKET button for 2 seconds. The Basket will rise.

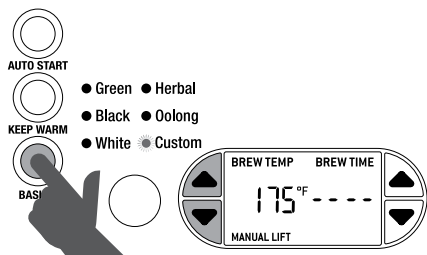

NOTE

Once a customized time has been selected and one tea making or water heating cycle has been activated, the customized time will remain in the memory of the Tea Maker until you change it. To return to default settings, see Page 20.

AUTO START FEATURE

This feature allows you to program the specific time when the Tea Maker will automatically turn on and start either a tea brewing cycle or water heating cycle.

Setting the 'Auto Start' Feature

1. Select the desired tea type and tea strength.
2. Press and hold the AUTO START button until the LCD screen displays the AUTO START clock symbol and a blinking CURRENT TIME and START TIME. The button surround will illuminate and the tea alert will sound.
3. To set the CURRENT TIME, press the left ARROW UP button to increase the time, or the left ARROW DOWN button to decrease the time in 1 minute increments. Ensure the correct 'AM' or 'PM' is displayed.



NOTE

Pressing and holding the ARROW UP button or ARROW DOWN button will increase the scrolling speed.


4. To set the START TIME, press the right ARROW UP button to increase the time, or the right ARROW DOWN button to decrease the time in 1 minute increments. Ensure the correct 'AM' or 'PM' is displayed.
5. Once current time and start time are programmed, press either the flashing HOT WATER|Cancel or TEA|Cancel button to select which feature you would like to start at the programmed time.
6. The LCD screen will display the current time and start time, in addition to the AUTO START symbol. The AUTO START button surround will illuminate and remain illuminated until the START TIME is reached, indicating that the 'Auto Start' feature has been activated.
7. Ensure that the Tea Maker is prepared with:
 - a) Sufficient water in the Glass Jug and tea leaves in the Basket for the tea brewing cycle or,
 - b) Sufficient water in the Glass Jug for the water heating cycle.
8. Once the selected START TIME is reached, the Tea Maker will automatically commence the tea brewing or water heating cycle. During this time, the AUTO START button surround will no longer illuminate until the cycle is complete.

Re-selecting the 'Auto Start' feature using previous START TIME

1. Press the AUTO START button once. The HOT WATER|Cancel and TEA|Cancel buttons will flash.
2. Press either the HOT WATER|Cancel or TEA|Cancel button to re-select the desired function. The 'Auto Start' feature has now been re-set.



NOTE

The 'Auto Start' feature can be canceled anytime by pressing the AUTO START button. The LCD screen will no longer display the  AUTO START symbol and the AUTO START button surround will cease to illuminate.

A NOTE ON STANDBY MODE

When the Tea Maker is plugged into a wall outlet, the LCD screen will illuminate for 3 minutes before entering standby mode. When in standby mode, the LCD screen will cease to illuminate.

To re-activate the Tea Maker out of standby mode, press any button, except the HOT WATER|Cancel or TEA|Cancel button on the Power Base. The LCD screen will re-illuminate. Pressing either the HOT WATER|Cancel or TEA|Cancel button will start the respective operation immediately.

MOVING THE TEA BASKET AFTER THE BREWING CYCLE

After the brewing cycle is complete, you may wish to lower the Tea Basket again for extra infusion to produce a stronger tasting tea. To do this, press and hold the BASKET button for 2 seconds. The button surround will flash and the Tea Basket will automatically lower to the bottom of the Glass Jug.

Once the desired strength has been reached, press and hold the BASKET button for 2 seconds. The button surround will flash and the Tea Basket will automatically rise to the top of the Glass Jug.




NOTE

If the Glass Jug is removed from the Power Base and the Tea Basket is in the lowered position, it will automatically return to the top upon return of the Glass Jug to the Power Base.

A NOTE ON TEMPERATURE CONVERSION (°F TO °C)

The temperature reading on the Tea Maker is preset to Fahrenheit but can be converted to Celsius.

Simultaneously press and hold the TEA TYPE and TEA STRENGTH buttons for 2 seconds. The corresponding 'C' or 'F' symbol will be displayed on the LCD screen.

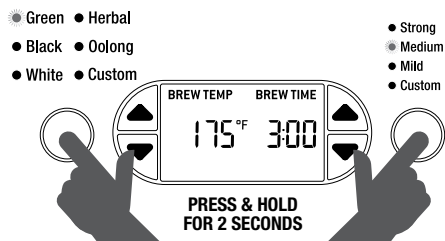

NOTE

If the Glass Jug is removed from the Power Base and the Tea Basket is in the lowered position, it will automatically return to the top upon return of the Glass Jug to the Power Base.



Care & Cleaning

Ensure the Tea Maker is turned OFF by pressing the TEA|Cancel button (when brewing tea) or the HOT WATER|Cancel button (when heating water) on the Power Base. The Tea Maker is OFF when the button surround illumination goes out. Remove the power plug from the wall outlet. Allow all parts of the Tea Maker to cool completely before disassembling and cleaning.



NOTE

Only the Jug Lid, Tea Basket, Tea Basket Lid and Tea Scoop are dishwasher safe.



WARNING

Never immerse the BASE OF THE GLASS JUG, POWER BASE, POWER CORD or POWER PLUG in water or allow moisture to come in contact with these parts.

CLEANING THE JUG LID AND INTEGRATED SCALE FILTER

1. Wash the Jug Lid in warm soapy water with a soft sponge, rinse and dry thoroughly. The integrated scale filter can be cleaned by placing under running hot water and rubbing with a cleaning cloth or brush.
2. Alternatively, the Jug Lid is dishwasher safe. Position the Jug Lid vertically so the scale filter is facing upwards. This will allow water to drain properly.
3. Let all surfaces dry thoroughly prior to using.

CLEANING THE GLASS JUG

1. After each use, empty the Glass Jug. Do not allow brewed tea to stand overnight.

2. Wipe the interior of the Glass Jug with a soft damp sponge or rinse with warm water. Tea deposits will enhance the flavor of the brewed tea, so if only using as a Tea Maker do not wash with soapy water.
3. Wipe the exterior of the Glass Jug with a soft damp cloth to clean.



WARNING

Never immerse or wash exterior of glass jug under running water.



NOTE

Do not use chemicals, steel wool, or abrasive cleaners to clean the inside or outside of the Glass Jug as these may scratch the surface.

REMOVING TANNIN STAINS WITH REVIVE ORGANIC TEA CLEANER

Revive Organic Tea Cleaner is designed to remove tannin stains. It does not remove scale or rust.

1. Ensure the Tea Maker and Tea Basket are empty.
2. Fill the Tea Maker with 1500ml water. Attach the Tea Basket to the magnetic post. Select 212°F (100°C) and press the HOT WATER|Cancel button to boil. Cool for 1 minute. Lower the Tea Basket by pressing the BASKET button for 2 seconds.
3. Pour the contents of the Revive Organic Tea Cleaner packet into the water.
4. Allow to stand for 5 minutes.
5. Empty the Tea Maker and repeat step 2 to rinse. For best results, rinse twice.
6. Empty the Tea Maker and thoroughly rinse with tap water before use.



CAUTION

Harmful if swallowed. Eye and skin irritant.

KEEP OUT OF REACH OF CHILDREN AND PETS. Avoid contact with eyes. In case of contact with eyes, rinse immediately with water and seek medical advice. If skin or hair contact occurs, remove contaminated clothing, flush skin and hair with running water. Do not ingest. If swallowed, do not induce vomiting and seek prompt medical attention.



NOTE

To purchase Revive Organic Tea Cleaner contact Breville Consumer Support or visit www.breville.com

REMOVING TANNIN STAINS WITHOUT REVIVE ORGANIC TEA CLEANER

1. Fill the Tea Maker with 1500ml water and one of the following:
 - a) Juice of one lemon, as well as the lemon.
 - b) 2 tablespoons of baking soda.
 - c) 6 tablespoons of white vinegar.
2. Select 212°F (100°C) and press the **HOT WATER|Cancel** button to boil. Allow to cool. For best results, leave to soak overnight.
3. Discard the solution then scrub with a soft bristled brush (non metallic). Fill the Tea Maker with clean water, boil, then discard the water. For best results, repeat.
4. Thoroughly rinse the Tea Maker with tap water before use.



NOTE

Through regular use over time, scale build-up can affect the performance and the life

of the Tea Maker. Lime and phosphate are common forms of scale that can damage your Tea Maker. Lime scale, a harmless mineral, comes in the appearance of white-colored or rusty looking build up on the inner walls and inner base of the Glass Jug. Phosphate scale can't be seen; however, it can cause the water to appear cloudy when heated. To prevent scale from damaging your Tea Maker, ensure to de-scale the Glass Jug regularly. Use a commercial de-scaling agent and follow the instructions that come with the agent.

CLEANING THE TEA BASKET LID, TEA BASKET AND TEA SCOOP

1. Wash the Tea Basket Lid, Tea Basket and Tea Scoop in warm soapy water with a soft sponge, rinse and dry thoroughly. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the accessory surfaces, before cleaning.

2. Alternatively, these accessories are dishwasher safe.
3. Let all surfaces dry thoroughly prior to using.

CLEANING THE POWER BASE

1. Wipe the Power Base with a soft damp sponge.
2. Let all surfaces dry thoroughly prior to inserting the power plug into a wall outlet.

STORAGE

1. Ensure the Tea Maker is switched off, cleaned and dried before storing.
2. Ensure that the assembled Tea Basket is securely attached to the magnetic post within the Glass Jug.
3. Ensure that Jug Lid is securely in place.
4. Wrap the power cord around the power cord storage under the Power Base.
5. Stand the Tea Maker upright on the Power Base. Do not store anything on top.



Troubleshooting

PROBLEM	WHAT TO DO
Tea Maker will not switch 'ON'	<ul style="list-style-type: none">• Check that the power plug is securely inserted into the outlet• Insert the power plug into an independent outlet• Insert the power plug into a different outlet• Reset the circuit breaker if necessary• For additional safety the Tea Maker is fitted with a thermal cut out. In the event of severe overheating, the Tea Maker will automatically shut down to prevent further damage. Should this occur, call Breville Consumer Support.
The Tea Maker will not work	<ul style="list-style-type: none">• Check that the Glass Jug is securely positioned on the Power Base.
The LCD light has gone out	<ul style="list-style-type: none">• The Tea Maker goes into standby mode if not used for 3 minutes. When in standby mode, the LCD screen will cease to illuminate.• To re-activate the Tea Maker out of standby mode:<ul style="list-style-type: none">- Remove then replace the Glass Jug from the Power Base.- Press any button on the Power Base except the HOT WATER Cancel or TEA Cancel buttons. The LCD screen will re-illuminate.
I cannot select a certain function	<ul style="list-style-type: none">• Certain features cannot be selected or changed during the heating or brewing cycle. The LCD screen may temporarily change, or a sound alert may be heard, but no changes to the cycle will be made.
The LCD screen displays 'RESET'	<ul style="list-style-type: none">• The LCD screen will display a flashing 'RESET' when there is a resettable electronic issue. Lift the Glass Jug off the Power Base then put it back on. Alternatively, remove the plug from the wall outlet, wait 5 seconds, then plug back in.• Call Breville Consumer Support if the 'RESET' message continues.
The LCD screen displays 'ERROR'	<ul style="list-style-type: none">• The LCD screen will display a flashing 'ERROR' when there is a non-resettable issue with the appliance. Should this occur, call Breville Consumer Support.
I would like to have the Tea Maker's default settings back	<ul style="list-style-type: none">• Even when unplugged from the wall outlet, the Tea Maker will remember the last setting used for each function.• To restore the Tea Maker's default settings for each function, simultaneously press and hold AUTO START and KEEP WARM buttons for 2 seconds.

There is a rattling noise inside the Glass Jug	<ul style="list-style-type: none"> • This is normal. The noise is from the magnet located inside the jug post and may be heard when the Tea Basket is not attached.
The 'BASKET CYCLE' feature / BASKET button does not work	<ul style="list-style-type: none"> • The BASKET button can only be selected when using the Tea Maker for brewing tea. It cannot be selected when using the Tea Maker as a variable temperature kettle. When brewing tea, the BASKET button can be used in 3 different ways: <ul style="list-style-type: none"> • To assist infusion <ul style="list-style-type: none"> - This feature continuously auto lifts and lowers the Tea Basket during the tea brewing cycle. This movement loosens the tea leaves within the Tea Basket, allowing the heated water to circulate freely around the tea leaves for maximum infusion. - To select this feature, press the BASKET button once, before or during the tea brewing cycle (see Page 10, 'Selecting the Basket Cycle Feature'). • For extra infusion <ul style="list-style-type: none"> - This feature lowers the Tea Basket after the brewing cycle is complete. The extra infusion produces a stronger tasting tea. - To select this feature, press and hold the BASKET button for 2 seconds after the tea brewing cycle is complete. The Tea Basket will lower. Once the desired strength has been reached, press and hold the BASKET button for 2 seconds. The Tea Basket will rise to the top of the Glass Jug (see Page 11, 'Moving the Tea Basket after the Brewing Cycle'). • For brew times over 10 minutes <ul style="list-style-type: none"> - In this mode, once the correct water temperature is reached, the Tea Basket will lower and commence brewing. However, it will not automatically lift the Tea Basket, allowing you to manually lift it once the desired brew time has elapsed. - To select this feature, press and hold the BASKET button for 2 seconds when the desired brew time has elapsed. The Tea Basket will rise to the top of the Glass Jug (see Page 15 'To Customize a Brew Time')
After boiling water, bubbles appear around the temperature sensor	<ul style="list-style-type: none"> • This is normal for the functionality of the Tea Maker
My tea tastes too weak or too strong	<ul style="list-style-type: none"> • Tea taste is a personal preference and may require experimentation to get it to your liking. For stronger tasting tea, increase the amount of tea or brew time (see Pages 8 and 13). For a weaker tasting tea, decrease the amount of tea (see Pages 8 and 13).