

the Juice Fountain™ Max

Instruction Book - BJE410



Breville®



Components



- A. Food pusher**
For pushing whole fruit and vegetables down the feed chute.
- B. Unique Direct Central Feed System**
Ensures maximum juice extraction.
- C. Extra wide 84mm feed chute** fits larger fruit and vegetables whole.
- D. Large capacity pulp container** (dishwasher safe).
- E. Stainless steel titanium reinforced micro mesh filter basket**
- F. Heavy duty motor**
With 5 year motor warranty.
- G. Cord storage**
Cord wraps around feet and clips into position under base.
- H. Interlocking safety arm**
Stops juicer operating without cover locked into place.
- I. Juicer cover**
(not dishwasher safe).
- J. Filter bowl surround**
Dishwasher safe.
- K. 1 litre juice jug and lid**
With built in froth separator (dishwasher safe).
- L. 2 speed electronic control ON/OFF switch**



Assembly

BEFORE FIRST USE

Before using your juicer for the first time, remove and safely discard any packaging materials and promotional stickers and labels.

Ensure the appliance is switched off at the power outlet and the power cord is unplugged. Wash the filter bowl surround, filter basket, juicer cover, food pusher, pulp container and juice jug and lid in warm, soapy water with a soft cloth. Rinse and dry thoroughly. The motor base can be wiped with a damp cloth. Dry thoroughly.


1. Place motor base on a flat, dry surface such as a bench top. Ensure that the motor base is switched OFF at the control panel, then switch the appliance off at the power outlet and unplug the power cord.



2. Place filter bowl surround on top of the motor base.




3. Align the arrows at the base of the stainless steel filter basket with the arrows on the motor drive coupling and push down until it clicks into place. Ensure the stainless steel filter basket is fitted securely inside the filter bowl surround and onto the motor base.

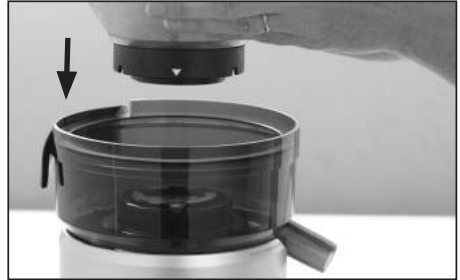


4. Place the juicer cover over the filter bowl surround, positioning the feed chute over the stainless steel filter basket and lower into position.




5. Raise the safety locking arm up and locate into the two grooves on either side of the juice cover.

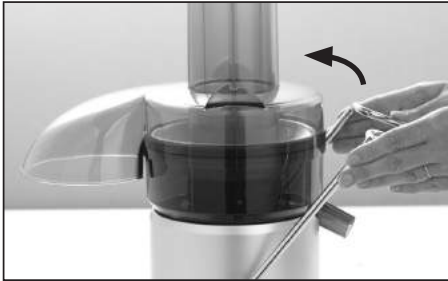


The safety locking arm should now be in a vertical position and locked into place on top of the juice cover.

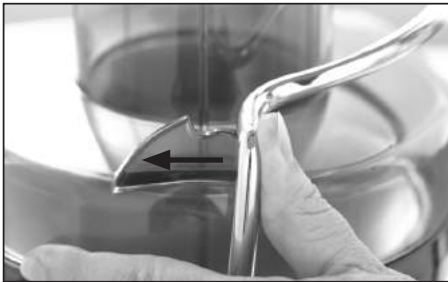

6. Slide the food pusher down the food chute by aligning the groove in the food pusher, with the small protrusion on the inside of the top of the feed tube.

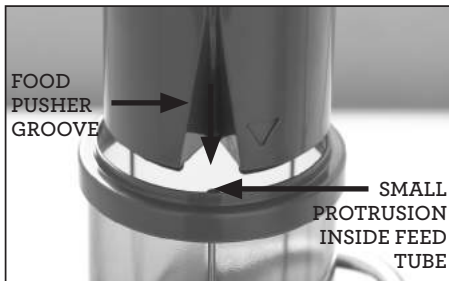

Continue to slide the food pusher down on the feed chute.

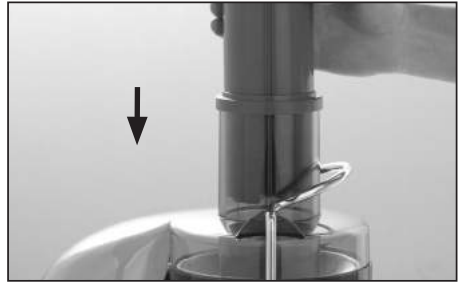

7. Place the pulp container into position by tilting the motor base slightly to the right. Insert the pulp container under the juicer cover on the left hand side ensuring it is supported by the juicer cover and motor base.



NOTE

To minimise cleaning, line the pulp container with a plastic freezer bag to collect the pulp. Pulp can be used in other dishes, or as a compost for the garden or discarded.

8. Place the juicer jug under the juice spout on the right hand side of the juicer. The juicer jug lid can be used to avoid any splatter.



Functions

1. Wash your selection of fruit and vegetables to be juiced.

NOTE

Most fruit and vegetables such as apples, carrots and cucumbers will not need to be cut or trimmed to size as these will fit whole into the feed chute. Ensure vegetables such as beetroots, carrots etc. have all soil removed, are well washed and trimmed of leaves before using.

2. Ensure the juicer is correctly assembled. Refer to Assembling your Breville juicer. Ensure the juicer jug is placed under the juice spout and pulp container is in position before commencing juicing.
3. Plug the power cord into a 230/240V power outlet. Turn the power ON at the power outlet. Adjust the speed to the desired setting. Push the two speed switch either up for low speed or down for high speed depending on the type of fruit or vegetable being juiced. Use the speed selector as a guide for juicing different fruits and vegetables.


SPEED SELECTOR TABLE

Apples	High
Apricots (stone removed)	Low
Beetroot (trimmed)	High
Blueberries	Low
Broccoli	Low
Brussels sprouts (trimmed)	High
Cabbage	Low
Carrots	High
Cauliflower	Low
Celery	High

SPEED SELECTOR TABLE

Cucumber (peeled)	Low
Cucumber, soft skinned	High
Fennel	High
Grapes (seedless)	Low
Kiwi Fruit (peeled)	Low
Mangoes (peeled, stone removed)	Low
Melons (peeled)	Low
Nectarines (stone removed)	Low
Oranges (peeled)	High or Low
Peaches (stone removed)	Low
Pears (stalks removed)	High for hard or Low for soft
Pineapple (peeled)	High
Plums (stone removed)	Low
Raspberries	Low
Tomatoes	Low
Watermelon (peeled)	Low

4. With the motor running, place food into the feed chute and use the food pusher to gently guide food down. To extract the maximum amount of juice, always push the food pusher down slowly.

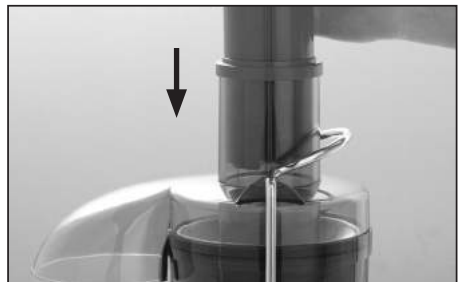

5. As fruit and vegetables are processed, juice will flow into the juice jug and the separated pulp will accumulate in the pulp container.

 **NOTE**

The pulp container can be emptied during juicing by turning the juicer OFF at the control panel and then carefully removing the pulp container. Replace empty pulp container before continuing to juice.

Do not allow the pulp container to overflow as this may affect the operation of the appliance.

 **NOTE**

To minimise cleaning, line the pulp container with a plastic freezer bag to collect the pulp. Pulp can then be used for other dishes, or as compost for gardens or discard.

 **NOTE**

To include the froth with your juice, simply remove the lid of the juice jug when pouring juice into the glass.

 **NOTE**

The juicer is fitted with a safety device which safeguards against overheating with excessive loads. If overheating occurs, the juicer will automatically activate the overload protection device and the unit will switch itself off. When the overload protection is activated, unplug the Juicer from the power outlet for at least 15 minutes to allow the unit to cool. Then plug juicer into the power outlet and use as normal.

 **WARNING**


Never use fingers to push food down the feed chute or to clear the feed chute. Always use the food pusher provided.

DISASSEMBLY


1. Ensure the juicer is turned off by pushing the speed switch up or down to the OFF position.
Then switch the appliance off at the power outlet and unplug the power cord.
2. Remove the pulp container by tilting the motor base slightly to the right and unlatch it from under the juicer cover.



3. Place both hands on either side of the safety locking arm and pull back and lift over the grooves on either side of the juicing cover.

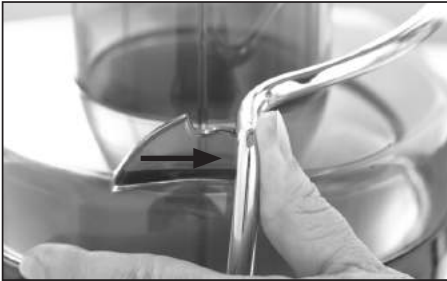

Lower the safety locking arm down out of position.

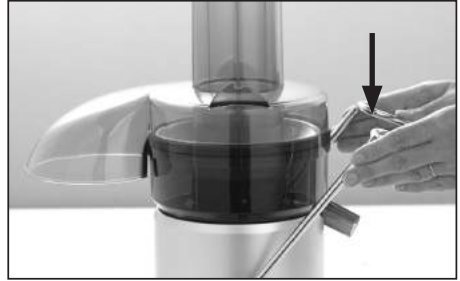


4. Lift the juicer cover of the juicer.





5. To remove the filter bowl surround with the stainless steel filter basket, still in place, hold base of the juicer and turn filter bowl surround by the juice spout.



6. Lift off the filter bowl surround with the stainless steel filter basket still in place.

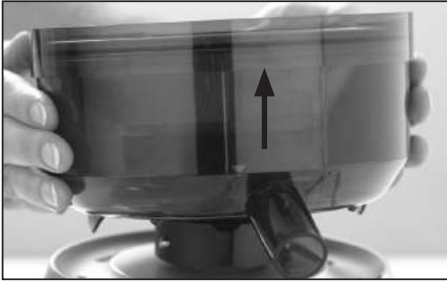

7. To remove the stainless steel filter basket from the filter bowl surround, insert fingers under the grooves marked 'lift basket' and lift filter basket up. For easy cleaning, it is recommended to remove filter basket over the sink.

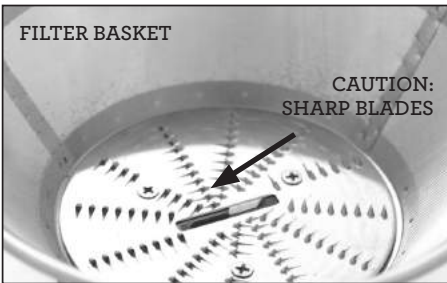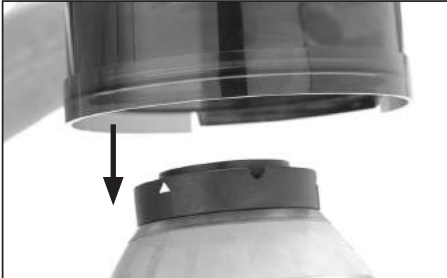

WARNING

The stainless steel filter basket contains small sharp blades to cut and process fruit and vegetables. Avoid touching the blades when handling the filter basket.



Care & Cleaning

Ensure the juicer is turned off by switching the ON/OFF button on the control panel to OFF. Then switch the appliance off at the power outlet and unplug the power cord.

Ensure the juicer is correctly disassembled. Refer to disassembling your Breville product.

FOR EASIER CLEANING:

- Clean as you go and avoid dried on juice or pulp residue.
- Immediately after each use, rinse removable parts in hot water to remove wet pulp. Allow parts to air dry.



NOTE

To minimise cleaning, line the pulp container with a plastic freezer bag to collect the pulp. Pulp can then be used for other dishes, or as compost for the garden or discarded.



CLEANING THE MOTOR BASE

- Wipe the motor base with a soft, damp cloth then dry thoroughly.
- Wipe any excess food particles from the power cord.



NOTE

Do not use abrasive scouring pads or cleaners when cleaning the parts or motor base as they may scratch the surface.

CLEANING THE FILTER BOWL SURROUND, JUICER COVER, FOOD PUSHER, PULP CONTAINER

- Wash all parts in warm soapy water with a soft cloth. Rinse and dry thoroughly.



NOTE

The filter bowl surround, juicing jug and lid, food pusher and pulp container, are dishwasher safe (top shelf only).

The juice cover is not dishwasher safe.

CLEANING THE FILTER BASKET

- For consistent juicing results always ensure that the stainless steel filter basket is thoroughly cleaned using the supplied cleaning brush.
- Soak the stainless steel filter basket in hot soapy water for approximately 10 minutes immediately after juicing is completed. If pulp is left to dry on the filter it may clog the fine pores of the filter mesh thereby lessening the effectiveness of the juicer.
- Using the cleaning brush, hold the filter basket under running water and brush from the inside of the basket to the outer rim. Avoid touching the small sharp blades in the centre of the filter basket. After cleaning the filter basket, hold it up towards a light to ensure the fine mesh holes are not blocked. If the holes are blocked, soak the filter basket in hot water with 10% lemon juice to loosen the blocked holes. Alternatively, wash the filter basket in the dishwasher.



Do not soak the stainless steel filter basket in bleach or other abrasive cleansers.

Always treat the filter basket with care as it can be easily damaged.



NOTE

The stainless steel filter basket is dishwasher safe (top shelf only).

CLEANING THE JUICE JUG

- Rinse the juice jug and lid with froth attachment under running water.
- Wash both parts in warm soapy water with a soft cloth. Rinse and dry thoroughly.



NOTE

The juice jug and lid are dishwasher safe (top shelf only).

REMOVING STUBBORN OR STRONG FOOD STAINS AND ODOURS

Discolouration of the plastic may occur with strongly coloured fruit and vegetables. To help prevent this, wash parts immediately after use. If discolouration does occur, the plastic parts can be soaked in water with 10% lemon juice or they can be cleaned with a non abrasive cleaner.

The juicer is constructed with a heavy duty motor. So heavy duty, we have given the motor a 5-year guarantee against faulty materials or manufacture. This warranty is an extension of the 12-month replacement guarantee and covers the motor only. The warranty does not cover damage caused by accident, misuse, or being used in a manner not stated in the instruction book.

The 5-year guarantee is additional to the conditions and warranties mandatory implied by the laws and regulations of the individual States and Territories of Australia and the Trade Practices Act, 1974.

12 MONTH REPLACEMENT GUARANTEE

The juicer is totally covered for the first 12 months against faulty material or manufacture by the Breville 12-month replacement guarantee. (See Guarantee Card enclosed).



WARNING

Do not immerse the motor base in water or any other liquid. The centre of the filter basket and feed chute contains small sharp blades to process fruit and vegetables during the juicing function. Do not touch blades when handling the filter basket or feed chute.