



From its superbly crafted and ultra-quiet motor right through to the commercially styled casing, your Professional Collection Dual Disc Juice Processor represents a perfect balance of functionality, reliability and absolute style.

In developing this booklet our goal was to provide you with a starting point from which you can explore the incredible versatility of your new juicer. From beautifully fresh and healthy fruit and vegetable recipes, coulis, fruit purees and dips through to the guide for cleaning and maintenance, we hope each page helps you gain many years of health and enjoyment.

Enjoy!



BREVILLE RECOMMENDS SAFETY FIRST

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

IMPORTANT SAFEGUARDS FOR YOUR PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR

- Fully unwind the cord before use.
- Remove and safely discard any packaging materials and promotional labels before using the appliance for the first time.
- To protect against electric shock, do not immerse cord, plug or motor base in water or any other liquid.
- Do not allow the cord to hang over the edge of a table or counter, touch hot surfaces or become knotted.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. Do not use the appliance if the power supply cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances.
- When using Puree Disc and insert, always use the speed 1.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not push produce into the feed chute with your fingers. Always use the Food Pusher provided.
- Do not touch the small sharp teeth and blade in the centre of the Juice disc.
- Do not touch the blade in the Feed Chute.
- Always make sure the Professional 800 Collection Dual Disc Juice Processor is properly and completely assembled before connecting to power outlet and operating. The unit will not turn 'on' unless properly assembled.
- Always use the Professional 800 Collection Dual Disc Juice Processor on a dry, level surface.
- Always switch the Professional 800 Collection Dual Disc Juice Processor off, then switch off at the power outlet and then unplug appliance – if appliance is to be left unattended – if not in use – before cleaning, – before attempting to move the appliance, disassembling, assembling and when storing the appliance.
- Do not juice stone fruit unless seed stone has been removed.
- When using Puree Disc and insert, always remove seeds, core and skin from fruit before processing (seeds of passionfruit, berries and kiwi fruit are acceptable).



BREVILLE RECOMMENDS SAFETY FIRST (continued)

- Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest Breville Service centre for examination, replacement or repair.
- Carefully read all instructions before operating and save for future reference.
- Do not immerse power cord or motor base in water or any other liquid. Do not use a water jet to clean the power cord or motor base.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Do not leave the appliance unattended when not in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not run the Professional 800 Collection Dual Disc Juice Processor for more than one minute at a time when juicing hard fruit or vegetables, at a rapid rate and with firm pressure.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces or become knotted.
- Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
- Any maintenance other than cleaning should be performed at an authorized Breville service centre.
- Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30MA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Strictly follow cleaning and care instructions.
- Do not run ice or hard fruit/vegetables such as raw beetroot and carrots through the juicer when using the puree extractor.

WARNING: SUPER WIDE FEED CHUTE.
DO NOT PLACE HANDS OR FOREIGN OBJECTS DOWN FEED CHUTE, ALWAYS USE FOOD PUSHER PROVIDED.

KNOW YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR

Safety locking arm
Juicer will not operate without juicer cover in place and safety locking arm in place in the vertical operating position


Super wide feed chute
fits whole apples, carrots, tomatoes and peeled oranges. Makes juicing fruit and vegetables fast and easy

Large pulp container with integrated handle
(dishwasher safe)

Five speed electronic control
Low speed when using Puree Extractor or for juicing soft fruits with high water content such as watermelon. High speed for juicing hard fruit and vegetables

“Start | Stop” button

Overload protection button
to safeguard against overheating (not shown in picture)



Food pusher
for pushing whole fruit and vegetables down the wide feed chute

Juicer cover
(dishwasher safe)

Stainless Steel Filter Surround
(dishwasher safe)

Stainless steel micro mesh filter juice disc
(dishwasher safe)

Dishwasher safe 1.2 litre juice jug
with integrated handle for left or right handed use

High performance motor

Motor Base
contains the motor and supports the Stainless Steel Filter Surround

Cord
exits at rear of juicer and wraps around feet (not shown in picture)



KNOW YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

Juice jug lid

Allows juicer to operate with the lid on, therefore eliminating any splatter during operation. Place lid onto juice jug to store juice in refrigerator

Built in froth separator

Frother attachment ensures juice froth is separated from juice when poured into a glass (if preferred)

**Puree Extractor
(for soft fruits and vegetables)**

Puree Insert
For processing softer fruits such as bananas, mangoes and strawberries Integrated handle for left and right handed use

Puree Disc
For processing softer fruits such as bananas, mangoes and strawberries



NOTE: To retain froth in the juice jug simply remove the lid before pouring the juice.

ASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR

Before first use

Before using your Professional 800 Collection™ Dual Disc Juice Processor for the first time, remove and safely discard any packaging material and promotional labels. Ensure the appliance is switched off at the power outlet and the power cord is unplugged.

Wash the Filter Surround, Juice Disc, Puree Disc, Puree Insert, Juicer Cover, Food Pusher, Juice Jug, Juice Jug Lid and Pulp Container in warm soapy water with a soft cloth or nylon brush. Rinse and dry thoroughly.

FOR USE WITH JUICE EXTRACTOR

Place the motor base on a flat dry surface such as a bench top. Ensure that the motor base is switched OFF at the control panel, then switch the appliance OFF at the power outlet and unplug the cord.

STEP 1



Place the Filter Bowl Surround on the top of the Motor Base.

STEP 2



Align the arrows on the Juice Disc with the arrows on the Motor Drive Coupling and push down until it clicks into place. Ensure the Juice Disc is fitted securely inside the Filter Bowl Surround and onto the Motor Base.

STEP 3




Place the Juicer Cover over the Filter Bowl Surround, positioning the Juicer Cover over the stainless steel filter disc and lower into position.



ASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

STEP 4

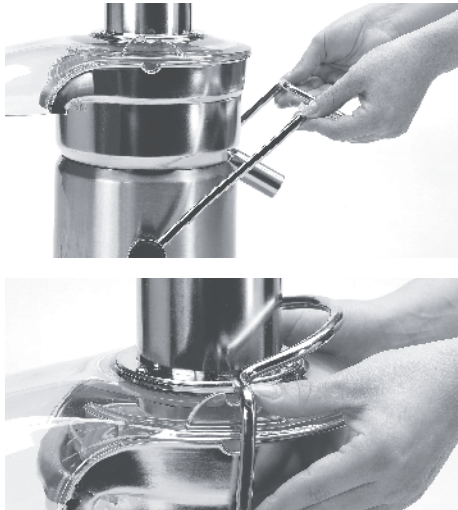

Raise the safety locking arm up and lock into the two grooves on either side of the juicer cover. The safety locking arm should now be in a vertical position and locked into place on top of the juicer cover.

STEP 5 & 6



Slide the food pusher down the feed chute by aligning the groove in the food pusher with the small protrusion on the inside of the top of the feed chute.

ASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

STEP 7



Place the Pulp Container into position by tilting slightly.

Hint: to minimize washing up we suggest that you place a plastic freezer bag (or plastic grocery bag) into the pulp container to collect the pulp.

STEP 8



Place the juice jug provided under the spout on the right hand side of the Dual Disc Juice Processor. The lid can be placed on to avoid any splatter.

NOTE: A glass could also be used to collect the juice.

NOTE 1: The Pulp Container can be emptied during juicing by turning the Professional 800 Collection Dual Disc Juice Processor “OFF” and then carefully removing the Pulp Container. (Replace empty Pulp Container before continuing to juice).

Do not allow the Pulp Container to overfill as this may prevent correct operation or damage the unit.



ASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

PREPARATION OF FRUIT AND VEGETABLES FOR JUICE EXTRACTOR

- If using fruits with hard or inedible skins such as mangoes, guava, melons or pineapple, always peel before juicing.
- Citrus fruit can be juiced if peeled first.
- All fruits with pits, hard seeds or stones such as nectarines, peaches, mangoes, apricots, plums and cherries must be pitted before juicing.
- A small amount of lemon juice can be added to apple juice to inhibit browning.

HINT: Your Professional 800 Collection Dual Disc Juice Processor makes invigorating, frothy orange juice. Simply peel the oranges and juice. (It is best to refrigerate oranges before juicing).

JUICE EXTRACTOR	SPEED (using juicing disc)
Apples	5
Apricots (stone removed)	2
Beetroot (cleaned, trimmed)	5
Blueberries	1
Broccoli	4
Brussel sprouts (trimmed)	5
Cabbage	4
Carrots (cleaned)	5
Cauliflower	4
Celery	5
Cucumber, peeled	2
Cucumber, soft skinned	4
Fennel	5
Grapes (seedless)	1
Kiwi fruit (peeled)	2
Mangoes (peeled, stone removed)	2
Melons (peeled)	1
Nectarines (stone removed)	2
Oranges (peeled)	3
Peaches (stone removed)	2

JUICE EXTRACTOR	SPEED (using juicing disc)
Pears hard (stalks removed)	5
Pears soft (stalks removed)	2
Pineapple (peeled)	5
Plums (stone removed)	2
Raspberries	1
Tomatoes	1
Watermelon (peeled)	1

ASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

FOR USE WITH PUREE EXTRACTOR

Place the motor base on a flat dry surface such as a bench top. Ensure that the motor base is switched OFF at the control panel, then switch the appliance OFF at the power outlet and unplug the cord.

STEP 1



Place the Filter Bowl Surround on the top of the Motor Base.

STEP 2



Place the Puree Disc into the Filter Bowl Surround and onto the Motor Drive Coupling. Push down until it clicks into place. Ensure the Puree Disc is fitted securely inside the Filter Bowl Surround and onto the Motor Base.

NOTE: Never use Puree Disc without Puree Insert. They must always be used together.

STEP 3



Place the Puree Insert into the Filter Bowl Surround, making sure the warning label on the handle is facing upwards.



ASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

STEP 4



Place the Juicer Cover over the Puree Insert and Filter Bowl Surround and lower into position.

STEP 5



Raise the safety locking arm up and lock into the two grooves on either side of the juicer cover. The safety locking arm should now be in a vertical position and locked into place on top of the juicer cover.

STEP 6



Slide the food pusher down the feed chute by aligning the groove in the food pusher with the small protrusion on the inside of the top of the feed chute.

ASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

PREPARATION OF FRUIT AND VEGETABLES FOR PUREE EXTRACTOR

- Only soft fruits should be used with the Puree Extractor.
- When using fruits with hard inedible skins, such as mangoes, pineapple or kiwi fruit, always peel before juicing.
- When using fruits with a hard core such as pineapple, always remove this before juicing.
- All fruits with pits, hard seeds or stones such as nectarines, peaches, mangoes and apricots must be pitted or deseeded before juicing.
- Passionfruit pulp, peeled kiwi fruit and berries can be processed without removing seeds.

PUREE EXTRACTOR	SPEED
Apricots (stone removed)	1
Bananas (peeled)	1
Kiwi fruit (peeled)	1
Mangoes (peeled, stone removed)	1
Melons (peeled)	1
Peaches (stone removed)	1
Pears soft (stalks removed)	1
Pineapple (peeled and cored)	1
Raspberries	1
Strawberries (stalks removed)	1
Tomatoes (cored and quartered)	1
Watermelon (peeled, seeds removed)	1

NOTE: When using the Puree Extractor only use Speed 1. Always ensure motor is running before adding fruit and/or vegetables to feed tube.



Operating

OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR

WITH JUICE EXTRACTOR OR PUREE EXTRACTOR

STEP 1

Wash your selection of fruit and/or vegetables ready for juicing. Prepare fruits according to charts above.

STEP 2

Based on the type of fruit or vegetable you are juicing/pureeing select either the Juice Extractor or the Puree Extractor.

WARNING: DO NOT PUT HARD FRUIT AND VEGETABLES (IE. CARROTS, APPLES, FRESH BEETROOT, ETC.) OR ICE THROUGH JUICER WHEN USING PUREE EXTRACTOR. THIS COULD DAMAGE PARTS OF THE UNIT.

STEP 3

Ensure the Professional 800 Collection Dual Disc Juice Processor is correctly assembled – see previous instructions. Ensure the Juice Extractor or Puree Extractor is thoroughly cleaned before each use (refer to cleaning on pages 26-27). Ensure you place the Juice Jug (or glass) under spout before commencing juicing.

STEP 4

Plug the power cord into a 230/240V power outlet and then turn the power on at the outlet. The light surrounding the ‘Start | Stop’ button will illuminate.

NOTE: The light will be illuminated for 2 minutes before fading into sleep mode. The light will come back on by activating any of the controls.

STEP 5

Use the speed selector table as a guide for juicing different fruit and vegetables. Push the “Start | Stop” button and the unit will automatically start.

STEP 6

With the motor running, place food into the Feed chute. Using the Food Pusher, gently guide food down the Feed Chute. Do not exert excess pressure. To extract the maximum amount of juice, always push the Food Pusher down slowly.

STEP 7 – USING THE JUICE EXTRACTOR

As fruits and vegetables are processed juice will flow into the juice jug and the separated pulp will accumulate in the Pulp Container.

The Pulp Container can be emptied during juicing by turning Juicer OFF at the control panel and then carefully removing the Pulp Container. Replace the empty Pulp Container into position before continuing to juice.

NOTE: Do not allow the Pulp Container to over fill as this may affect the operation of appliance.



OPERATING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

STEP 8 – USING THE PUREE EXTRACTOR

When using the Puree Extractor puree will flow into the juice jug. There will be no pulp extracted into Pulp Container.

NOTE 1: SELF-RESET OVERHEATING PROTECTION

The Breville Professional 800 Collection Dual Disc Juice Processor also fitted with a self-resetting safety device which safeguards against overheating on the motor with excessive loads. If overheating occurs, the juicer will automatically activate the overheating protection device and the motor will switch itself off. If this occurs, the light surrounding the Start/Stop button will flash red. When the overheating protection is activated, unplug the juicer from power outlet for at least 15 minutes to allow the unit to cool. Then plug juicer into the power outlet and use as normal.

NOTE 2: ELECTRONIC PROTECTION
The Breville Professional 800 Collection Dual Disc Juice Processor will automatically stop operating if the motor is stalled. This is an electronic safety feature. Either too much food is being processed at one time or the pieces are not small enough. Try trimming food, cutting food into smaller pieces of even size and/or processing a smaller amount per batch.
If this occurs, the light surrounding the Start/Stop button will flash red. To continue juicing, turn the power OFF at the power outlet, clear the feed chute, finally turn the appliance back on by pressing the Start/Stop button to “ON”.



NOTE 3: OVERLOAD PROTECTION BUTTON
The Breville Professional 800 Collection Dual Disc Juice Processor is fitted with a safety device which safeguards against overloading with excessive loads. If this occurs, juicer will automatically activate the overload protection button and the unit will switch itself off.
If this occurs turn the power OFF at the power outlet and allow the unit to cool. Then press the Overload Protection Button found on the bottom of the Motor Base. The safety device will then be reset and the Breville Professional 800 Collection Juice Processor is ready for use again.



Disassembling



DISASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR

JUICE EXTRACTOR

STEP 1



Push the “START | STOP” button on the control panel of the Breville Professional 800 Collection Dual Disc Juice Processor to turn off. Then switch the appliance OFF at the power outlet and unplug the cord.

NOTE: The light will be illuminated for 2 minutes before fading into sleep mode. The light will come back on by activating any of the controls.

STEP 2



Remove the Pulp Container by holding the handle and pivoting the bottom of the Pulp Container away from the juicer.

STEP 3



Place both hands on either side of the Locking Arm and pull back and lift over the grooves on either side of the Juicer Cover.

STEP 4



Move the Locking Arm down.

STEP 5



Lift the Juicer Cover off the Breville Professional Dual Disc 800 Collection Juice Processor.

STEP 6




To remove Stainless Steel Filter bowl surround, hold base of juicer and turn filter bowl surround by the Juice Spout.



DISASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

STEP 7

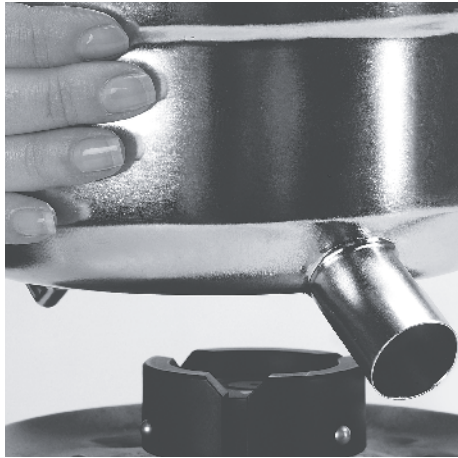


Lift off the Filter Bowl Surround with the Juice Disc still in place.

STEP 8



To remove the Juice Disc, turn the Filter Bowl Surround upside down and carefully remove the Juice Disc (it is recommended to remove the Juice Disc over the sink).

CAUTION: ULTRA SHARP STAINLESS STEEL CUTTING DISC AND TEETH.

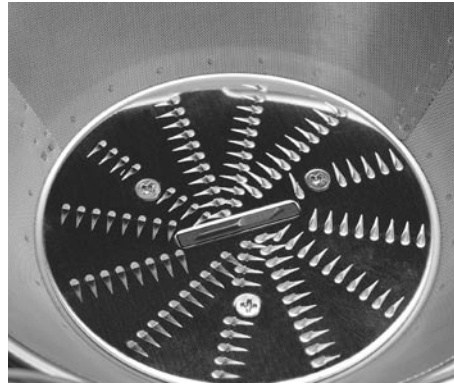

WARNING: THE STAINLESS STEEL FILTER JUICE DISC CONTAINS A TITANIUM REINFORCED CUTTING DISC WITH SUPER SHARP BLADES AND TEETH. DO NOT TOUCH TEETH AND BLADE WHEN HANDLING THE JUICE DISC.

DISASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

PUREE EXTRACTOR

STEP 1



Push the “START | STOP” button on the control panel of the Breville Professional 800 Collection Dual Disc Juice Processor to turn off. Then switch the appliance OFF at the power outlet and unplug the cord.

STEP 2



Remove the Pulp Container by holding the handle and pivoting the bottom of the Pulp Container away from the juicer.

STEP 3



Place both hands on either side of the Locking Arm and pull back and lift over the grooves on either side of the Juicer Cover.



DISASSEMBLING YOUR BREVILLE PROFESSIONAL 800 COLLECTION™ DUAL DISC JUICER PROCESSOR (continued)

STEP 4



Move the Locking Arm down.

STEP 5



Lift the Juicer Cover off the Breville Professional 800 Collection Dual Disc Juice Processor.

STEP 6



Lift the Puree insert from the Filter Bowl surround.

STEP 7



Lift the Puree Disc out of the Filter Bowl Surround. (Be careful not to touch the sharp cutting teeth.)

CAUTION: ULTRA SHARP STAINLESS STEEL CUTTING DISC AND TEETH.



WARNING: THE PUREE CUTTING DISC HAS SUPER SHARP BLADES AND TEETH. DO NOT TOUCH TEETH AND BLADE WHEN HANDLING THE PUREE DISC.



Care and Cleaning

CARE AND CLEANING

- Always ensure that Breville Professional Collection Dual Disc Juice Processor is switched off and that the power is switched off at the power outlet. Then remove the plug from the power outlet before cleaning, disassembling or assembling and storing the appliance.
- Follow these instructions to clean all surfaces of parts that come into contact with food during normal use.
- For easy cleaning- immediately after each use rinse removable parts under running water. Allow parts to air dry.
- After disassembling the unit (see pages 19-25) all removable parts may be washed in hot soapy water, then rinse well and dried.
- The Breville Professional Collections Juice Processor juice cover, filter bowl surround, pulp container, puree disc, stainless steel filter disc and 1.2L juice jug are dishwasher safe (Top Shelf only).

Wipe the motor base with a damp cloth.



- For consistent juicing results always ensure that the Juice Disc is thoroughly cleaned using the supplied nylon brush. Using the nylon washing brush, hold the Juice Disc under running water and brush from the inside of the disc, hold it up towards a light to ensure the fine mesh holes are not blocked. If the holes are blocked soak the Juice Disc in hot water with 10% lemon juice to loosen the blocked holes. Alternatively wash the Juice Disc in the dishwasher.
- Do not soak either the juice extractor or the puree extractor in bleach.
- Always treat the juice extractor and puree extractor with care as they can be easily damaged.
- Discolouration of the plastic may occur with strongly coloured fruit and vegetables. To help prevent this, wash parts immediately after use.
- If discolouration does occur, the plastic parts can be soaked in 10% lemon juice and water or they can be cleaned with a non abrasive cleaner.

NOTE: The Puree Insert is not dishwasher safe. Please rinse in warm water.

NOTE: To assist with cleaning soak the Juice Disc in hot soapy water for approximately 10 minutes immediately after juicing is completed. If pulp is left to dry on the filter it may clog the fine pores of the filter mesh thereby lessening the effectiveness of the Juicer. For your convenience a nylon cleaning brush has been included with your Professional 800 Collection Dual Disc Juice Processor.

Hint: To minimise washing up place a freezer bag (or plastic grocery bag) into the Pulp Container to collect the pulp. When juicing is completed simply remove the bag containing the pulp and place the bag into a bin. (Refer page 38 for “Ideas on Using the Pulp”).





TROUBLE SHOOTING GUIDE

POSSIBLE PROBLEM	EASY SOLUTION
Machine will not work when switched “ON”	The safety locking arm may not be correctly engaged in the vertical operating position with the locking arm located into the two grooves on either side of the juice cover (see picture on page 10, step 4).
	Check the Overload Protection Button on the bottom of the Motor Base to check if the safety device has not been activated (see Note 3. on page 18 ‘Operating your juicer’).
	The Overheating protection device has not been activated automatically, allow more time for the motor to cool down (see Note 1. on page 18 ‘Operating your juicer’).
Motor appears to stall when juicing	Wet pulp can build up under the cover if the juicing action is too vigorous. Try slower juicing action by pushing the food pusher down more slowly. Clean the filter bowl surround, the juice disc and the juicer cover. Select speed 5 instead of the speed 1 setting.
	The Breville Professional 800 Collection Dual Disc Juice Processor will automatically stop operating if the motor is stalled. This is a electronic safety feature. Either too much food is being processed at one time or the pieces are not small enough. Try trimming food, cutting food into smaller pieces of even size and/or processing a smaller amount per batch. If this occurs, the light surrounding the Start/Stop button will flash red.
	To continue juicing, reset the Juicer by pressing the Start/Stop button to “Off”, then clear the feed chute, finally turn the appliance back on by pressing the Start/Stop button to “ON”.
	Hard fruits and vegetables will put excess strain onto the motor if a low speed is selected. Please refer to the juicing guide on Page 12, to determine the correct speed for the fruits and vegetables selected on juicing.
Excess pulp building up the Stainless Steel Filter Disc	Stop the juicing process. Remove the juicer cover the Stainless Steel scrape off pulp. Re-assemble and begin juicing again. Try alternating (soft and hard) vegetable and fruit varieties.
Pulp too wet and reduced extracted juice	Try a slower juicing action. Remove Juice Disc (refer page 9, steps 1 - 8) and thoroughly clean mesh walls with a fine brush. Rinse Juice Disc under hot water. If the mesh holes are blocked, soak the Juice Disc in a solution of hot water with 10% lemon juice to unblock the holes or wash in the dishwasher. This will remove excess fibre build up (from fruit or vegetables) which could be inhibiting the juice flow.

TROUBLE SHOOTING GUIDE (continued)

POSSIBLE PROBLEM	EASY SOLUTION
Juice leaks between the rim of the Juicer Cover and the Stainless Steel Filter Disc	Try a slower juicing action by pushing the food pusher down more slowly (refer page 14, step 6). Fruit and vegetables with a high water content (tomatoes and watermelon) should be juiced on low speed.
Filter Bowl Surround Sprays juice out from spout Filter Disc	Try a slower juicing action by pushing the food pusher down more slowly.
When using Puree Extractor the Filter Bowl Surround becomes full and clogs the spout on the Filter Bowl Surround.	Try using fruits with more water content to help flush through the contents. Additionally, try a slower juicing action by feeding one piece in at a time and by pushing the food pusher down more slowly.
Juicer suddenly switches off during juicing	The juicer has been stressed by overloading or stalling. Juicer will automatically activate the overload protection button and the unit will switch itself off. When this happens it is recommended that the unit is switched off at the power outlet and unplugged. Then press the Overload Protection Button found on the bottom of the Motor Base. The safety device will then be reset and the Breville Professional 800 Collection Juice Processor is ready for use again.
Red light flashing	This may indicate that the motor has been stress by Overheating with excessive load. The Juicer is fitted with a self-resetting safety device which safeguards against overheating on the motor with excessive loads. If overheating occurs, the juicer will automatically activate the overheating protection device and the motor will switch itself off. When the overheating protection is activated, unplug the juicer from power outlet for at least 15 minutes to allow the unit to cool. Then plug juicer into the power outlet and use as normal.
	The Juicer will automatically stop operating if the motor is stalled. If this occurs, the light surrounding the Start/Stop button will flash red. This is an electronic safety feature. Either too much food is being processed at one time or the pieces are not small enough. Try trimming food, cutting food into smaller pieces of even size and/or processing a smaller amount per batch. To continue juicing, unplug the juicer from power outlet, reset the Juicer by pressing the Start/Stop button to “Off”, then clear the feed chute, finally turn the appliance back on by pressing the Start/Stop button to “ON”.



TIPS ON USING THE JUICE EXTRACTOR

THE INSIDE INFORMATION ON JUICE

Although juice drinks are usually developed with flavour, texture and aroma at the forefront, the health benefits certainly add to the pleasurable taste experience.

95% of the nutrient content of fruit and vegetables is found in the juice. Liquids extracted from fresh fruit and vegetables form an important part of a well-balanced diet. Fresh fruit and vegetable juices are an easy to make source of vitamins and minerals. Juices are rapidly absorbed into the blood stream therefore being the quickest way in which the body can digest nutrients.

When you make your own juices, you have complete control over what you include in them. You select the ingredients and decide if you need to use sugar, salt or other flavouring agents.

Freshly extracted juices should be consumed just after they have been made to avoid a loss of vitamin content.

PURCHASING AND STORAGE OF FRUIT AND VEGETABLES

- Always wash fruit and vegetables before juicing.
- Always use fresh fruit and vegetables for juicing.
- To save money and obtain fresher produce, purchase fruit or vegetables that are in season.
- Keep your fruit and vegetables ready for juicing by washing them before storing.
- Most fruits and hardier type vegetables can be stored at room temperature. The more delicate and perishable items such as tomatoes, berries, leafy greens, celery, cucumbers and herbs should be stored in the refrigerator until required.

THE RIGHT TECHNIQUE

When juicing a variety of ingredients with varying textures start with the softer textured ingredients on low speed then change to high speed for harder texture ingredients.

If you are juicing herbs, sprouts or leafy green vegetables either wrap them together to form a bundle or juice them in the middle of a combination of ingredients on low speed to obtain the best extraction.

NOTE: If juicing herbs or leafy green vegetables on their own, the juice yield will be low due to the nature of centrifugal juicing. It is advised to juice then with a combination of other fruit and vegetables.

All fruit and vegetables produce different amounts of liquids. This varies within the same group i.e. one batch of tomatoes can produce more juice than another batch. Since juice recipes are not exact, the precise quantities of any juice are not crucial to the success of a particular mixture.

NOTE: To extract the maximum amount of juice always push the Food Pusher down slowly.

TIPS ON USING THE JUICE EXTRACTOR (continued)

GETTING THE RIGHT BLEND

It is easy to create great tasting juice. If you have been making your own vegetable and fruit juices, then you know how simple it is to invent new combinations. Taste, colour, texture and ingredient preferences are a personal thing. Just think of some of your favourite flavours and foods – would they work well together or would they clash. Some strong flavours could over power the more subtle flavours of others. It is however, a good rule of thumb to combine starchy, pulpy ingredients with those high in moisture.

USING THE PULP

The remaining pulp left after juicing fruit or vegetables is mostly fibre and cellulose which, like the juice, contains vital nutrients necessary for the daily diet and can be used in many ways. However, like the juice, pulp should be used that day to avoid loss of vitamins.

Some of the uses of pulp are to bulk out rissoles, thicken casseroles or soups or in the case of fruit, simply placed in a bowl topped with meringue and baked for a simple dessert.

Quite apart from the consumption use, pulp is great used in the garden for compost.

NOTE: When using the pulp, there may be some pieces of fruit or vegetables remaining. These should be removed before using the pulp in any recipes.